

# The Loadhog Self-Securing Lid



**Best  
Practice  
Handling  
Guidelines**

# A/ Carrying

The Half Euro Loadhog Lid is designed with integrated handles for ease of carrying/lifting and manoeuvring of the Pally when loaded.



# B/ Securing a load to the Pally

01/  
Stack product securely onto Pally



02/  
Carry lid using the ergonomic holds



03/  
Position over load




04/  
Ensure the lid sits firmly over all corners of the load. Lower until lid is securely in place



## C/ Attaching the strap

01/  
Take hold of hook

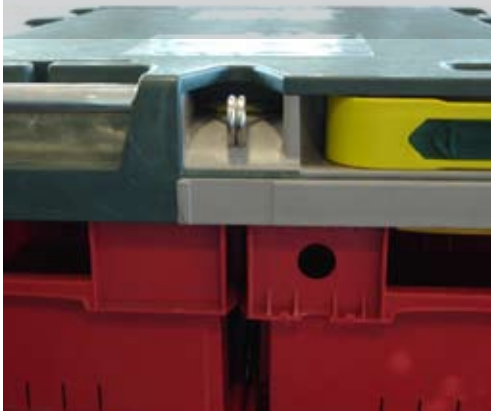

02/  
Draw out sufficient webbing to reach the Pally



03/  
Locate the hook on one side of the Pally pedal



## D/ Tensioning the strap

01/  
Hold the hook in place with your foot



02/  
The strap is tensioned by rotating the yellow lever to the left until the strap is sufficiently secure



03/  
Repeat both stages on the strap located on the other side of the Loadhog Lid

The Pallet should now be fully secure with both straps located and tensioned to the appropriate strength

## E/ To release the strap mechanism

01/  
Place one hand around the strap



02/  
Slide the green "RELEASE" button firmly to the left using your thumb until it engages.  
Rotate the yellow lever to the left until it stops. Then push the lever in one gentle movement further to the left – this will release the tension in the strap and the strap will be free to retract or extend



03/  
Pull a little strapping down (sufficient for the hook to be free from the Pally base). Gently guide the strap back into the lid as it retracts.



04/  
Ensure the hook is fully located back in it's housing in the Lid to prevent damage




05/  
Repeat these steps on the other side of the lid. The load should be free for breaking down or picking at this point.

## F/ Removing and stacking the lid


01/  
Using the in-built hand holds, take hold of the lid with both hands and carefully lift off the load



02/  
Stack the lid the correct way up on a spare Pally as shown above. The internal dimensions of the lid are designed to fit exactly on to the Pally base

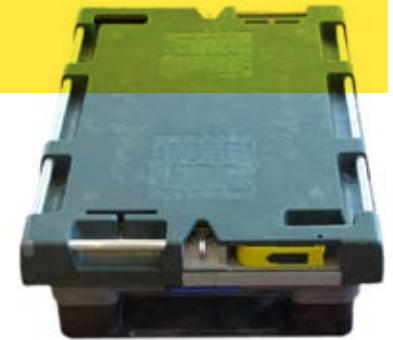

03/  
Nest other lids carefully and securely on top of the base lid up to a maximum of 25 lids per Pally

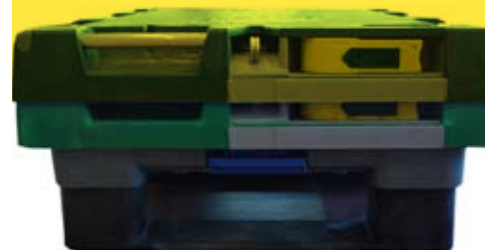

**Loadhog Ltd**

Telephone

+44 (0) 114 2800 800

Email

[info@loadhoglids.com](mailto:info@loadhoglids.com)

Website

[www.loadhoglids.com](http://www.loadhoglids.com)